


PRECISION INDEXING on your table saw or router table.

accu joint™ can also be used to precisely index a work piece to be cut flat on the table saw surface. To do so, please make a guide piece as shown in the sketch below to not only index your work piece, but also to help hold it down against the surface of the table.

accu joint is able to index precisely in any multiple of a 1/4 inch. This feature (in conjunction with the red plastic templates) will allow **kerfing** cuts (or slots to store computer disks, etc.) of 1/4, 1/2, 3/4, or 1 inch spacing.

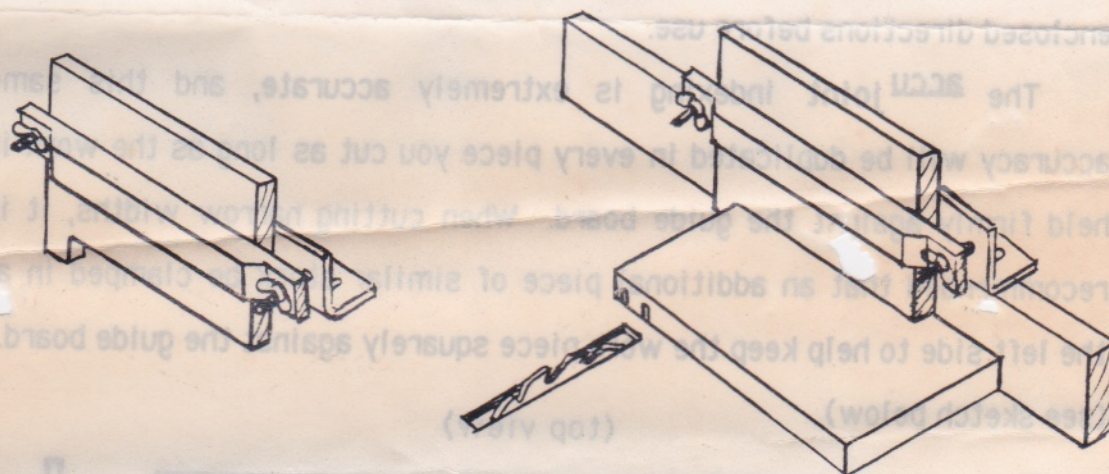

PRECISION DRILLED HOLES on your drill press.

To drill exactly spaced holes, clamp your work piece in the **accu joint** unit as when making finger joints. Mount a board on the surface of your drill press platten (as shown in the sketch below) and locate the index pin in the edge of the work board. Index the **accu joint** /workpiece assembly on the pin edge.

